


Note

This function cannot be used when operating in conjunction with UWP or WRT series transmitters.

Searching for available channels and configuring the channel settings via infrared communication (AUTO SET)

- 1 Press the MENU button to display the RX1 or RX2 menu, and press the + or – button to display the AUTO SET screen.
- 2 Press and hold the SET button for 1 second or longer. “YES” flashes on the display.

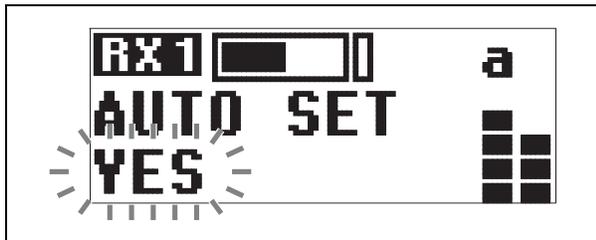


- 3 Press the SET button.
Clear Channel Scan starts searching for an available channel. When Clear Channel Scan finishes, the channel with the least noise and interference will be set. When the channel is set, infrared transmission starts automatically.

Note

Some noise may occur when power is turned on. Accordingly, turn down the audio input level of devices connected to the unit when turning the power on.

- 4 Press and hold the SET button on the transmitter and press the POWER/MUTING button to turn the power on.
- 5 Place the infrared transmitter port on the unit near the infrared detector on the transmitter.

Information about the channel set on the unit is sent to the transmitter, and a prompt appears on the transmitter display asking if you want to change to that frequency.

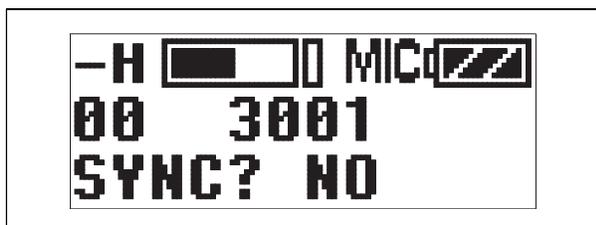

- 6 Use the + or – button to select “YES,” then press the SET button on the transmitter.

This sets the transmit channel and compander mode.


Notes

- The infrared transmission from the unit in step 3 continues for about 10 seconds. Perform steps 4 and 5 within those 10 seconds. If 10 seconds have elapsed, you can reestablish the infrared link using the SYNC screen on the unit.
- Place the unit and transmitter within about 20 cm (8 in.) of each other.
- If 5 seconds elapse without any user input after the prompt appears on the transmitter display, the transmitter returns to its previous state without changing the frequency.
- Communications using the infrared link may be adversely affected, depending on the surrounding environment. If this occurs, use the SYNC screen on the unit to reestablish the link.

Configuring the group/channel manually and configuring the channel settings via infrared communication (SYNC)

- 1 Configure the group/channel settings (page 5).
- 2 Press the MENU button to display the RX1 or RX2 menu, and press the + or – button to display the SYNC screen.
- 3 Press and hold the SET button for 1 second or longer. A confirmation screen appears.
- 4 Use the + or – button to select “YES,” then press the SET button.
- 5 Press and hold the SET button on the transmitter and press the POWER/MUTING button to turn the power on.
- 6 Place the infrared transmitter port on the unit near the infrared detector on the transmitter.

Information about the channel set on the unit is sent to the transmitter, and a prompt appears on the transmitter display asking if you want to change to that frequency.

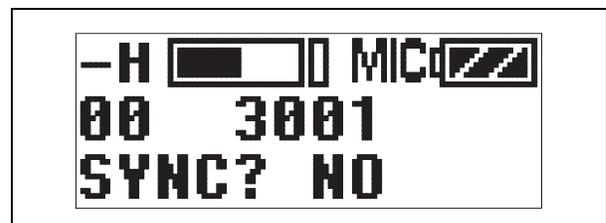

- 7 Use the + or – button to select “YES,” then press the SET button on the transmitter.

This sets the transmit channel and compander mode.